

Gearbox

MIDI Implementation Chart

Function		Transmitted	Recognised	Remarks
Basic Channel	Default Changed	1-16 1-16	16	
Mode	Default Messages Altered	0	X	
Note Number	True Voice	0	Х	* Note 1
Velocity	Note On Note Off	0	X	* Note 1 * Note 1
Aftertouch	Key Channel	0	X	* Note 1 * Note 1
Pitch Bend		0	X	* Note 1
Control Change		0	X	* Note 1
Program Change		0	0	* Note 1, Note 2
System Exclusive		0	X	* Note 1
System Common	MTC Song Position Song Select Tune	0 0 0 0	X O X X	* Note 1 * Note 1, Note 3 * Note 1 * Note 1
System Real Time	Clock Commands	0	0	* Note 1, Note 4 * Note 1. Note 4
Aux Messages	Local ON/OFF All Notes Off Active Sense Reset	0 0 0 0	X X X X	* Note 1 * Note 1 * Note 1

Notes:

- 1. Every received MIDI Byte is retransmitted.
- Program 128, Channel 16 disables received MIDI Clocks, any other Program number on Channel 16 enables them.
 All Program Changes on Channel 16 reset the clock counters.
- If a Song Position Pointer is received the following Continue will preset the clock counter to sixteenth note resolution, otherwise Continue will reset all counters on the beat.
- MIDI Clocks are generated by analogue or DINSync clocks. MIDI Start, Continue and Stop are generated by analogue, DINSync or panel switches.

O : Yes X : No

Version 1.1 October 2014